



VOTER GUIDE

Six-party voting-machine demonstration



1 Choose one party button.

2 Read the full party name on the Serial Monitor.

3 Use GREEN to confirm or RED to cancel.

1

NATKHAT PARTY

2

AURORAEON JANTA PARTY

3

MACHHAR PARTY

4

AVENGERS PARTY

5

MADHUMAKHI PARTY

6

BUCCHU PARTY

IMPORTANT

Press only one party button. The selected number and full name must match your choice.

1

Press your party button

The Serial Monitor prints the button number and party name.

2

Check the confirmation message

Make sure the selected party name is exactly the one you intended.

3

Confirm or cancel

Press GREEN to save the vote. Press RED to cancel without adding a vote.

4

Wait for the final message

A successful vote shows VOTE SAVED. A cancellation shows VOTE CANCELLED.

BUTTON COLORS

GREEN = YES / CONFIRM

RED = NO / CANCEL

Ask the operator for help if:

- Your button press does not appear in Serial Monitor.
- The wrong party name appears.
- GREEN or RED does not respond.
- You do not see VOTE SAVED after confirming.

DO NOT

Do not hold GREEN and RED together. That combination is reserved for the operator.

PRIVACY

After your vote is saved, step away and allow the next voter to begin.